

Canon

EOS REBEL X / EOS REBEL X

Command Dial

The settings on the command dial are situated around the **L** lock (OFF) position.

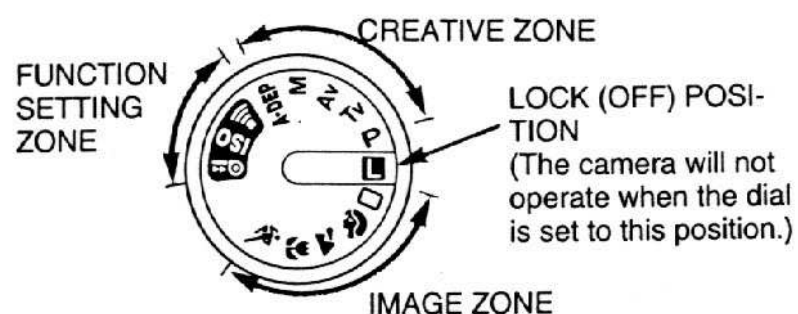


IMAGE ZONE

- S** : Sports (see page 24)
- C** : Close-up (see page 23)
- L** : Landscape (see page 22)
- P** : Portrait (see page 21)
- : Full Automatic (see page 17)

L : Lock/(OFF)

CREATIVE ZONE

- P** : Program AE (see page 25)
- Tv** : Shutter-priority AE (see page 27)
- Av** : Aperture-priority AE (see page 29)
- M** : Manual Exposure (see page 31)
- A-DEP** : Automatic Depth-of-field AE (see page 33)


FUNCTION ZONE

- : Sound Mode (see page 48)
- ISO** : Manual ISO Speed (see page 47)
- ◀▶** : To Rewind Film before End of Roll (see page 49)




When the camera is not in use, please set the command dial to **L**. When the camera is placed in a bag, this prevents the possibility of objects hitting the shutter button, continually activating the shutter and draining the battery.


Taking Photographs Straight Away

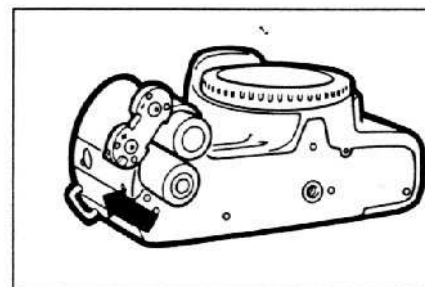


1. Load the batteries.
Insert two lithium batteries (CR123A/DL123A) into the camera as indicated.

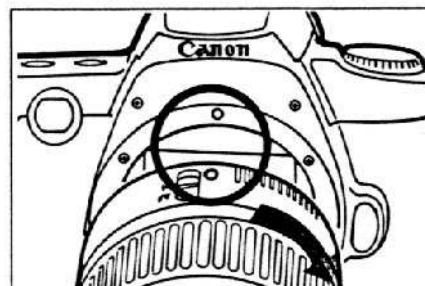

2. Attach the lens.
Align the red marks on the camera and lens, and turn the lens clockwise until it stops and locks with a click.

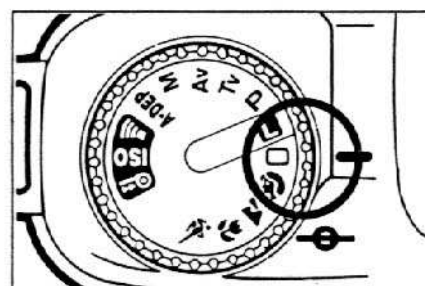


3. Set the command dial to **L**.

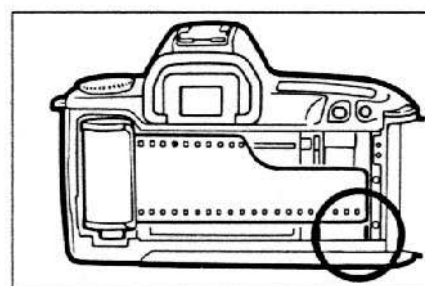

4. Load the film.
Align the film tip with the orange mark and close the back cover until it clicks securely shut.
• The film will wind forward to the first frame.




5. Focus the camera.
Compose the subject within the AF frame ([]) and lightly press the shutter button to focus.

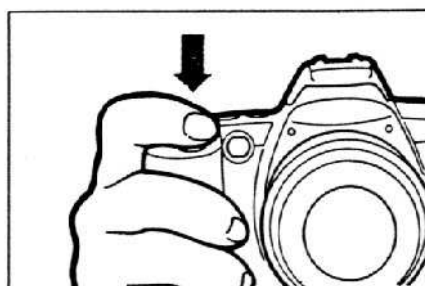


6. Take the photograph.
Press the shutter button down to take the picture.

Removing Film before the End of the Roll


If you want to remove the film from the camera before the end of the roll, rewind the film and remove it in the following way.

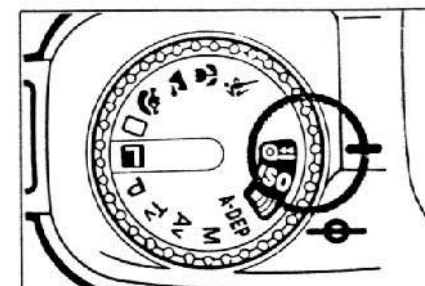

1. Set the command dial to **◀▶**.

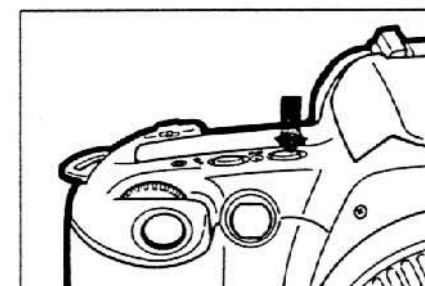

2. Press the film rewind button (the self-timer button) and keep it held down for at least one second.
• The film will begin to rewind, and as soon as winding is completed, you will hear a sound like that of the shutter release. The film-load mark only will appear on the display panel.

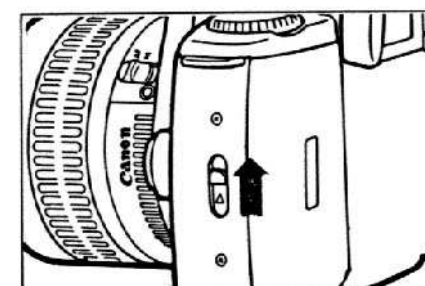

3. Open the back cover and remove the film.



If you remove a film before the end of the roll without using the film rewind function, the next film loaded will continue to wind back into the film cartridge. To prevent this, close the back cover once and press the shutter button down fully before loading the new film.

External LCD Panel

The following items are all indicated in the figure below.

